



Zipper Expansion

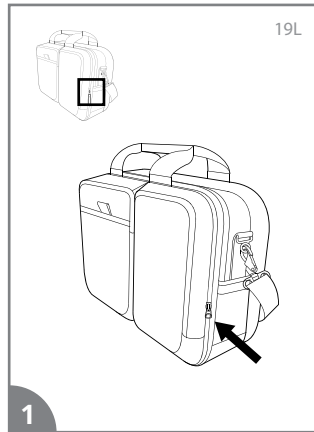


Expansion zipper is located on the bottom right side of bag.

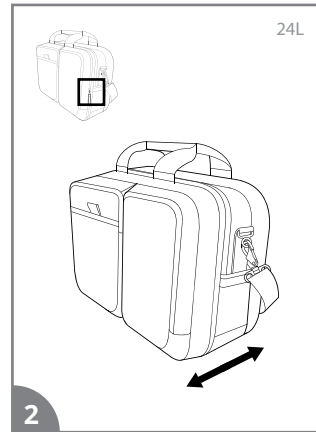

Un-zip to expand bag an additional 2.5 inches.


Add/Remove insert*

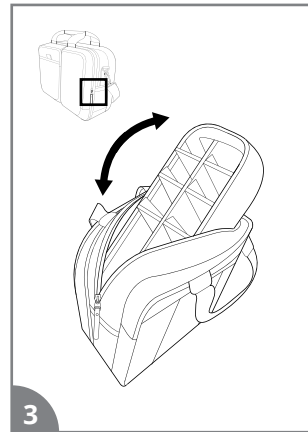

Un-zip middle pocket to add/remove photo insert.

* Insert sold separately

Laptop

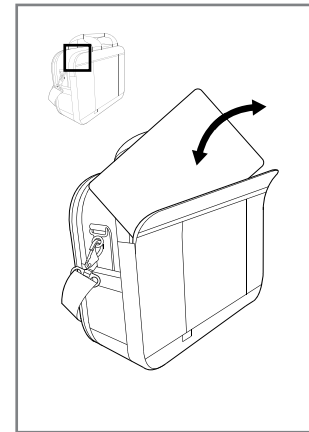

Laptop pocket.

Tablet



Tablet pocket.


Water Bottle



Water bottle sleeve un-zips to fit up to 1 Liter bottle.


*Liquid refreshments not included

Cell Phone

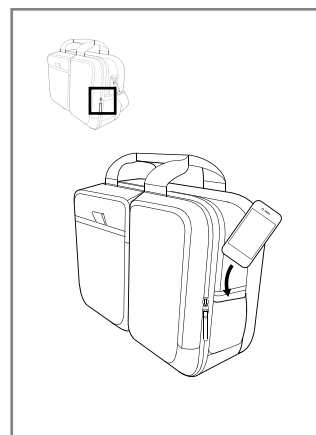


Cell phone pocket.

Travel sleeve

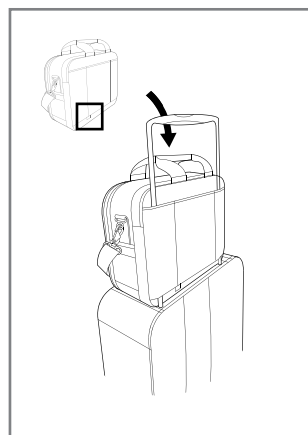

Un-zip travel sleeve and slide over handles to secure bag to luggage.

Stay organized

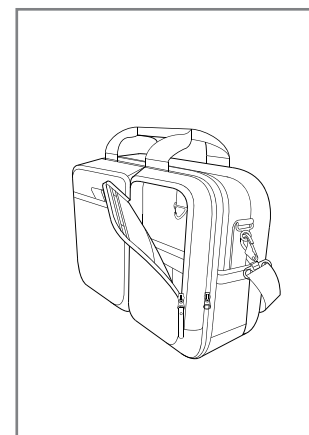

Front pockets have convenient storage for writing utensils and other small items.

If you encounter issues or simply have a question on how to best configure your Chobe, please contact us. We are here to help.

+1 (801) 823-2809 or
support@guragear.com

Love your new Chobe?

Tell us about it, better yet, tell the world with a Tweet @guragear. Use hashtag #lovegura and you never know, there might be some free swag floating your way for the Twitter love.