

KESSLER LOW PROFILE BALL HEAD GUIDE



The Kessler Low Profile Ball Head is an easy to use, ultra-low profile ball head system with a heavy duty weight capacity. The strong locking ball has 62 degrees of total adjustment. It features a 3/8"-16 thread stud on the top and bottom providing easy mounting to all the Kessler sliders and Shuttle Pods, without the need for an adapter. The modular design allows the Low Profile head to be used on other Kessler mounting accessories such as the Cheese Plate, Multi-Angle Mounting Plate, or the Kessler Kwik Release System. Other mounting accessories that accept a standard 3/8"-16 threaded stud are also compatible.



INSTALLATION AND ADJUSTMENT

1. The Low Profile Ball head can be threaded into any 3/8"-16 standard thread size.
2. Tighten the entire assembly by turning it clockwise into the receiving threads.
3. To adjust ball head angle, hold the top portion of the assembly while rotating the lower lever handles counter-clockwise.
4. Adjust the angle of the ball head as needed and while still holding the top portion of the assembly, rotate the lower lever handles clockwise to lock position.
5. To remove the ball head assembly, rotate the entire assembly counter-clockwise. This allows you to maintain the locked angle of the ball head so cameras and accessories can be re-mounted at the same angle without re-adjustment.


NOTE: We highly recommend the Kessler Multi-Angle Plate to be used in combination with the Low Profile Ball Head. These two components were designed to be used in tandem.



LOCKING PIN USAGE

When attaching the Multi-Angle Plate to the Kessler Low Profile Ball Head, a locking pin is utilized to prevent the plate from spinning.

1. Locate the included grub screw and thread it into the hole on the bottom of the Multi-Angle Plate with the included hex key. Do not over tighten.
2. Lower the plate over the Low Profile Head aligning the locking pin with any of the three (3) screw heads in the top of the ball head.
3. Tighten the top thumb wheel on the Multi-Angle Plate to lock in place.

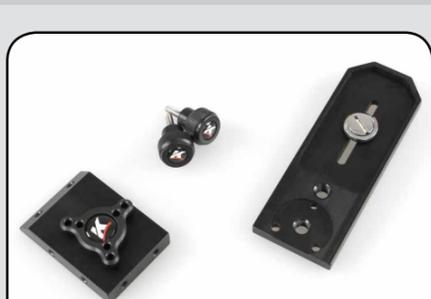

DIRECT MOUNT CAMERA PLATE

The camera plate portion of the Multi-Angle Plate can be direct mounted to the Low Profile Ball head for level shots on a slider.

1. Remove the camera plate from the Multi-Angle base plate.
2. Remove the three (3) socket cap screws with the included hex wrench and set the Low Profile Ball head round plate aside.
3. Align the round inset on the bottom of the camera plate to the top of the Low Profile Ball head.
4. Align the three (3) screw holes and re-insert the socket head cap screws removed in step 2.