




FEMALE-PT Installation Instructions

Parts List

① FEMALE-PT Top Cover	Quantity: 1
② FEMALE-PT Bottom Cover	Quantity: 1
③ PowerTap [®] Receptacle	Quantity: 1
④ Female PowerTap Pins	Quantity: 2
⑤ Screw	Quantity: 1
⑥ Nut	Quantity: 1

Instructions for Attaching to a Cable

1. Solder the wire/cable to the Female PowerTap Pins④. Note polarity of connector.
2. Insert the Female PowerTap Pins④ into the PowerTap Receptacle③.
3. Insert the PowerTap Receptacle③, with Female PowerTap Pins④ installed, into the FEMALE-PT Bottom Cover②.
4. Install FEMALE-PT Top Cover① onto the FEMALE-PT Bottom Cover②.
5. Place the Nut⑥ into the FEMALE-PT Top Cover②.
6. Insert the Screw⑤ through the FEMALE-PT Bottom Cover② and tighten. Do not overtighten.

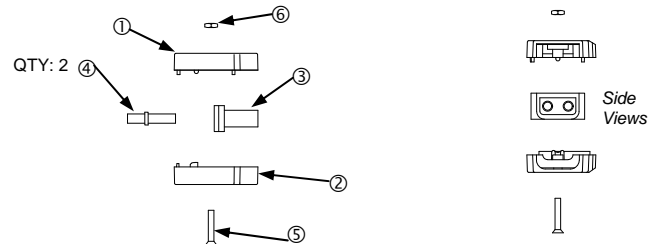

Anton/Bauer Inc., 14 Progress Drive, Shelton, Connecticut 06484 USA • (203) 929-1100 • Fax (203) 925-4988 • support@antonbauer.com
Europe, B.V. Eurode Business Center, Eurode-Park 1-2, 6461 KB Kerkrade, The Netherlands • (+31) 45 5639220 • Fax (+31) 45 5639222 • eurosupport@antonbauer.com
Singapore Office - Anton/Bauer, 6 New Industrial Road, # 02-02 Hoe Huat Ind. Bld., Singapore 536199 • (+65) 62975784 • Fax (+65) 62825235



www.antonbauer.com

7595-0284 Rev C